



Contents

Purpose 1

Enabling Auto-Laterality..... 1

Purpose

Auto-laterality is a built-in device function wherein the software can detect which eye is being imaged. This document provides guidance to turn this function on for your *California* device.

Note: Your device must have received an update to operate Nurburg 2.4.4 or later for auto-laterality to be enabled.


Enabling Auto-Laterality

- 1 | Log into the device tablet using an account with Admin permissions
- 2 | Tap **To admin** in the upper right corner of the screen
- 3 | Navigate to the **Configuration** menu option





4 | Locate **Enable auto-laterality** and switch to **On**

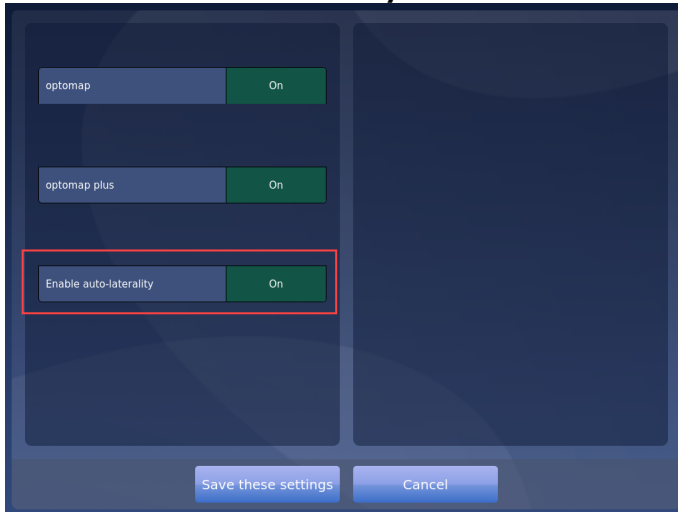


5 | Tap **Save these settings** to retain your changes

6 | Navigate to **System Preferences**





7 | Locate **Enable auto-laterality** and switch to **On**

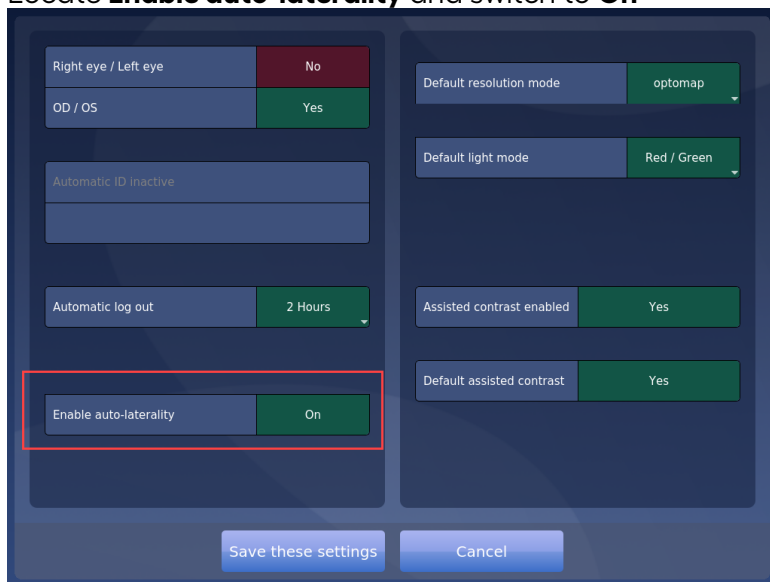

8 | Press **Save these settings** to retain your changes

9 | Select **Finished admin** to complete and return to your main imaging screen

